# **BATCHtrol II**

# Features

- Start/Stop Buttons & Remote Inputs
- Separate 8 Digit K-Factors For Rate & Total
- · Accepts Pulse or Analog Inputs
- Displays Rate, Total and Grand Total
- · Security Lockout with Missing Pulse Detection
- · Scaled Pulse Output
- Two Way RS232/422 Communications Option
- 2 Setpoints For Two Stage Valve Control
- NEMA 4X (IP65) Front Panel

# **Description:**

Featuring 8 digits of bright, .55 inch, alpha-numeric display, the BATCHtrol II can accept up to 20,000 pulses per second of digital count. The analog input versions accept inputs, such as 4 to 20 mA or 1 to 5V. The standard unit has two separate, 8 digit, floating decimal, "K" factors to convert the inputs to meaningful total and rate data. An optional 16 point K-factor can linearize flow from nonlinear meter outputs. The user, with the push of a button, can toggle back and forth to view the total of the batch, the rate of flow or the grand total of flow.

The BATCHtrol II may be thought of as two separate counters and a ratemeter. The "batching" counter counts to prewarn and preset numbers entered by the user and enables separate control outputs. The "totalizing" counter gives a cumulative reading or grand total. Finally, the ratemeter counts the number of pulses per second and, with its scaling feature, can provide gallons per minute or any other rate measurement without the totalizer losing counts. At any time, the user may view the total, the grand total or the rate while never interrupting the counting process.

Setup is done through the front panel and the menu driven software in the unit. Start-Stop control can be activated via the front panel buttons or remote inputs.

The unit operates from either 110 VAC/12 to 27 VDC, or optional 220 VAC/12 to 27 VDC. If AC power is used, two built-in regulated 12 VDC @ 100 mA power supplies are offered. They can be connected to provide +12 VDC and

-12VDC or +24 VDC to drive external devices. CMOS Logic is used to provide high noise immunity and low power consumption with EEPROM to hold data a minimum of 10 years if power is interrupted.

Up to 15 units can be connected to optional RS232 or RS422 communications port to set control points or access data.

# Specifications:

DiSPLAY: 8 Digit, .55" High, 15 Segment, Red Orange, LED. INPUT POWER: (Internally Fused) A: 110 VAC ±15% or 12 to 27 VDC B: 220 VAC ±15% or 12 to 27 VDC CURRENT: Maximum 280 mA DC or 5.3 VA at rated AC voltage. OUTPUT POWER: (On AC powered units only): +12 VDC at 100mA. Separate Isolated 12 VDC at 100mA to allow +12 VDC or +24 VDC regulated ±5% worst case.

DC Outputs are supplied with resettable fuses.

# **Batch Controller With Two Stage Valve Control**



# **TEMPERATURE:**

Operating:  $+32^{\circ}F$  (0°C) to  $+130^{\circ}F$  ( $+54^{\circ}C$ ). Storage:  $-40^{\circ}F$  ( $-40^{\circ}C$ ) to  $+200^{\circ}F$  ( $+93^{\circ}C$ ). ET: Extended Temperature  $-40^{\circ}$  to  $158^{\circ}F$  ( $-40^{\circ}$  to  $158^{\circ}F$ ).

ET: Extended Temperature -40° to 158°F (-40° to 70° C) ET not available with analog inputs or outputs

HUMIDITY: 0-90% Noncondensing

Listing: CE Compliant

# MEMORY:

EEPROM stores all program and total data for minimum of 10 years if power is lost.

# PULSE INPUTS:

3A: Standard, High impedance pulse input.

Low: Open or 0 to 1 VDC

High: 3 to 30 VDC, 10K Ohm impedance 20 kHz max. input speed (min. on/off 25  $\mu$ sec.).

3B: Same as 3A but has 4.7K Ohm input pull up resistors to +5 VDC on input for pulsing with contact to ground or NPN open collector transistor.

## ANALOG INPUTS:

The current loop or voltage input is converted to a highly linear 0 to 10 kHz frequency. This frequency can then be scaled by the 8 digit K-Factors to total or display rate in separate engineering units.

Accuracy over full temperature range: Zero error: +0.175% full scale max. Overall error: +0.5% full scale max. 5A/7A: 4-20mA, 250 Ohm impedance 5B/7B: 0-20mA, 250 Ohm impedance 5C/7C: 1-5 VDC, 15K Ohm impedance 5D/7D: 0-5 VDC, 15K Ohm impedance 5E/7E: 0-10 VDC, 15K Ohm impedance 6A: 4-20 mA, Square Law, 250 Ohm impedance **RESET:** 

Front push button: "CLR" resets displayed number and control output.

# **REMOTE START & STOP/RESET INPUTS:**

A 4 to 30VDC positive pulse will activate these inputs. Pin 10 is the START input and when activated, the unit will "start." Pin 5 is the STOP/RESET input. When activated, the unit will "stop" (if unit is started and the batch is not complete). When the unit is stopped or the batch is complete, activating this input will reset the total. If pin 5 is held high (4 to 30VDC), the display will flash "STOPPED" and any start inputs will be inhibited. Stop always over-rides Start input.

NOTE: The remote START input will not work with the type 7 input option (analog in & analog out) boards. All other features will work as described above.

These new features have not yet been added to the 16 point linearization BATCHtrol II version 12.0.

## FACTORED OUTPUT:

The BATCHtrol II gives one pulse out for each factored total count. Open collector sinks 30 VDC maximum to 1 volt maximum at 100mA maximum. Output speed is user selectable (see table below). An internal buffer holds up to 10,000 pulses for output at the selected frequency before "DATALOST" flashes, indicating pulses are lost. If factored rate exceeds 7 digits "RFF..." flashes. These alarms indicated that speed has been exceeded.

Speed(HZ)	10	200	2000	20000
Min. on/off				
(msec)	47.5	2.0	0.2	0.013

## CONTROL OUTPUTS:

#### (Each of two outputs)

1. NPN Transistor Version: (Optional)

The open collector sinks max. 250mA from 30 VDC when active. (When relay is used, 10 VDC is provided at transistor outputs through relay coil. If greater than 2mA is used, relay will remain energized. Applying greater than 10 VDC may destroy unit. Transistor will sink 100mA in "ON" state).

#### 2. SPDT Relay Version:

10A 120/240 VAC or 28 VDC (Standard).

ANALOG OUTPUT:

Digital input or analog input (except Square Law) versions can be ordered with an analog output of the rate or total reading. User keys in the low and high settings at set-up.

## Current Outputs:

A sinking driver generates a corresponding linear current through the external devices, updating with each update of the rate. Accuracy is  $\pm$ .5% FS worst case. Compliance voltage must be 3 to 24 VDC, non inductive. (The BATCHtrol II can provide the DC source as long as the drop across all devices being driven does not exceed 21 V).

Voltage Outputs:

When the voltage out option is ordered, a controlled voltage output is located at terminal 3 and referenced to pin 12 (ground). Accuracy is  $.1\% @ 20^{\circ}C(max. drift .01\%/C^{\circ})$ .

#### SECURÍTY:

The BATCHtrol II has a missing pulse detector. The user selects the amount of time (1 to 99 sec.) that the unit will "wait" for input pulses. If the unit doesn't receive pulses within the selected time, the unit displays "SECURITY" and both relays drop out. (00 Disables the security feature; Entering the lockout code returns the unit to the run mode)

#### PRESETS:

The user may enter two numbers to set up the batch totalizer, Preset and Prewarn. The Prewarn is a number set a certain number of counts before the preset number. For instance, you may want one hundred gallons in a particular batch. You may also want a valve to close and slow down flow 25 gallons before the end. Your preset is 100, your prewarn is 25. When the start is activated, the relays energize simultaneously to start flow. When the totalizer reaches 75, the prewarn relay drops out. When the totalizer reaches 100 the preset relay drops out. The preset values can be viewed or changed via the menu (when stopped).

#### **K-FACTOR:**

In the standard unit a fixed K-Factor is used to convert the input pulses or frequency generated internally by the analog input to engineering units. The 8 digit K-Factor dividers, with decimal keyed into any position, allow easy direct entry of any K-Factor greater than 0.0001 to 999999999. Separate K-Factors may be entered for the total and rate section. Thus, you may batch and total in gallons and display rate in liters per hour. The maximum factored count speed is 20,000 Hz. The maximum factored rate is 7 digits.

#### **16 POINT LINEARIZATION:**

This variable K-factor option makes flow systems more accurate and often extends their usable range by allowing users to dial in different K-factors for different flow rates. It works with either pulse input or standard analog current loop or voltage input. It is recommended for flow meters whose K-factors change with different rates of flow. From 3 to 16 points of frequency from 0 to 10,000 Hz. and K-factors greater than .0001 to 999,999 are dialed in at set up. The 16 point linearization option uses 8 digit floating math to interpolate between settings. Rate per second, per minute or per hour programmability eliminates the need to calculate separate K-factors for total and rate.

#### TOTALIZER:

Each of the total and grand total counters have 8 digits. In the set-up mode choose "R0" (reset to zero) for adding operation or "SP" (set to preset) for subtracting operation. While viewing the total the display can be made to flash the grand total by pressing "ENT". Activating "CLR" while the grand total is flashing, resets the grand total counter.

### RATEMETER:

Accurate to 51/2 digits (±1 display digit). The rate meter can be programmed to accept almost any number of pulses per unit of measurement, sample from 2 to 24 seconds maximum, and autorange up to 6 digits of significant information. The rate meter with a "K" factor of 1 displays the rate of pulses per second. Simply dial in the proper "K" factor to display in minutes, hours or other units of measurement. (See 16 Point Opt. Above) Press the "C" button while the unit is displaying the batch to display the rate; "R" is displayed on the left side of the display. **WEIGHT:** 

This feature is used to provide a weighted averaging of the rate data being received. Higher settings provide more averaging for a more stable display, derived from the equation:

(Old Data x "Weight") + New Data ("Weight" +1)

#### LOCKOUT:

Unauthorized front panel changes can be prevented by entering a user selected four digit code.


OUTCARD:

RS232 or RS422 serial two way communication options are available. Up to 15 units can be linked together and addressed separately to transmit unit status or accept new set points in the standard ASCII format. Baud rates of 300, 600,1200,2400 4800 or 9600 as well as choice of odd, even, space or mark parity can be selected by keypad control.


#### **Termination:**

1 • NOT USED


- 2 SCALED OUTPUT (OPEN COLLECTOR)
- 3 ANALOG OUTPUT (SINK)
- 4 INPUT (PULSE/ANALOG)
- 5 STOP / RESET INPUT
- 6 NOT USED
- 7 NOT USED
- 8 NOT USED
- 9 NOT USED
- **10 START INPUT**
- **11 NO CONNECTION**
- 12 GROUND (-DC)
- 13 12 VOLTS OUT
- 14 + DC POWER IN (12 to 27 VDC)
- 15 ISOLATED -12 VOLTS OUT
- 16 ISOLATED +12 VOLTS OUT
- 17 AC INPUT
- 18 AC INPUT
- **19 PREWARN TRANSISTOR**
- **20 PRESET TRANSISTOR**



# **Typical Hookup:**

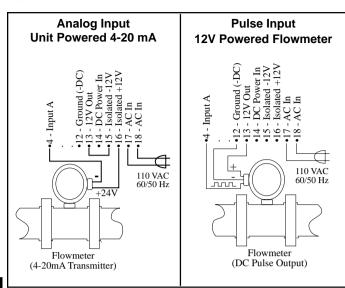

# Dimensions:

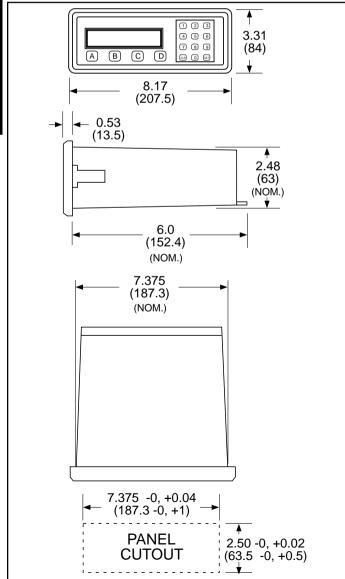

		ering		_		
Example	BT28	A 3.	A	2 /	<u>\ 1</u>	3
Series:	i					
Batchtrol						
Operating						
	C ±15% or					
	C ±15% or	12 10 2	i vu	4		
Control Inp				 May		
* 3A: STD I						
* 3B: As 3A 5A: 4-20 r		12 pull t	up res	ISTORS		
5A. 4-20 r 5B: 0-20 r						
5C: 1-5 V						
5D: 0-5 V						
5E: 0-10 \						
	nA Square	l aw				
	A in, 4-20mA					<u> </u>
	A in, 4-20m/			For Othe	r Outputs	<u>s:</u>
	C in, 4-20m/				0-20mA	but
	C in, 4-20m/				· 0-5V out · 0-10V ou	t
	DC in, 4-20m		J			<u> </u>
Control Ou	,					
1: Open C						
-	Relay 10A					
Input Spee	•					
	PS (Inputs	3A, 3B)				
* C: 0-400						
* E: 0-20K						
	5A-5E, 6A,		,			
* Dip switch						
all units c	an be field i	modified	d eas	ily.		
Options: (N	Jultiple Opt	ions Av	ailabl	e) —		l
1: RS232	Serial Inter	face				
2: RS422	Serial Inter	face				
3: 4-20 m	A Output (li	nput 3A	or 3E	3 only)		
	nA Output					
	DC Output (					
	DC Output			3B only	/)	
	nt Lineariza					
				וg)	Co	onsult Facto
	nded Tempe					
	to 158°F (-					
	ot available	e with a	analo	g input	ts or ou	tputs
Accessorie			<b>D</b> 05			
NEMATRO						•.
	bunting acc					s unit.
NEMATRO						
	ounting acc	commod	ating	12 TRC	JL Serie	es unit.
FLEXCOVE						
XTROL7/4-				g		
P1000 Print	ler (see ACC	essorie	:5)			